

# How to light a SunGlo Heater

## To Light Pilot

Rotate control knob to "Pilot" position. Firmly depress knob for 30 seconds while lighting pilot through  $\frac{1}{2}$ " dia. lighting hole above control. Pilot should remain lit.


NOTE: Allow 1½ minutes to purge air through pilot after connection with a new tank of propane gas.

## To Turn Heater On

Turn control knob to "On" position.

## To Turn Heater and Pilot "Off"

Turn knob to "Pilot" position. Depress slightly and turn to "Off" position. Wait 5 minutes after complete shutoff of heater before relighting pilot. Turn "Off" gas tank when heater is not in use.

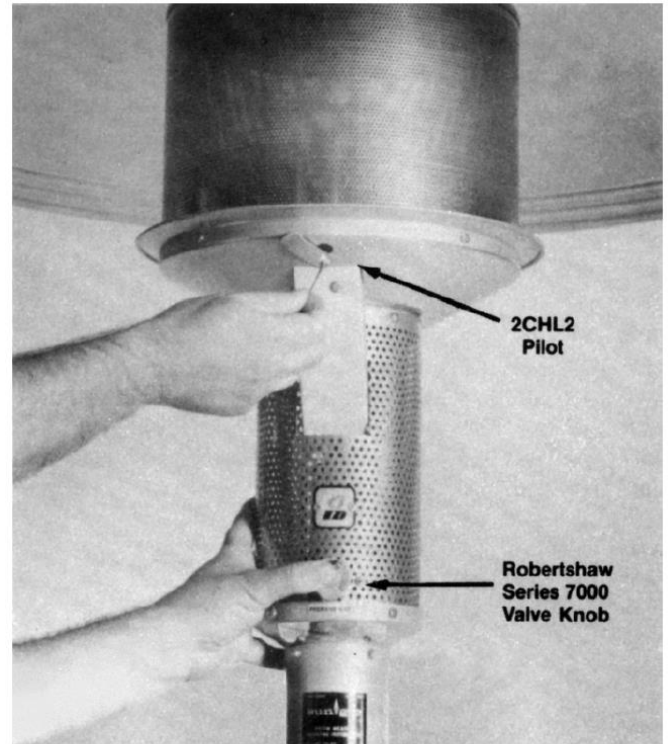

Manufactured by

**INFRARED DYNAMICS, INC.**

Yorba Linda, CA 92886 U.S.A.

Tel: (714) 572-4050 Fax: (714) 572-6093

Toll-Free: (888) 317-5255

[www.infradyne.com](http://www.infradyne.com)